

## Installation Instructions

### Exterior Vinyl Shutter Arch Top and Exterior Vinyl Shutter Transom Top For Raised Panel and Louvered Shutters

#### Step 1

Attach the Arch Top to the exterior vinyl shutter using the clips provided. Align the vinyl shutter and Arch Top on a flat surface. Join the vinyl shutter and Arch Top together by pushing each clip as far as it will go. Use 2 clips per shutter Arch Top. See Figure 1 at the right for clip placement on the back of the vinyl shutters.

#### Step 2

Fasten the exterior shutter to the wall using the instructions supplied with the shutter.

#### Step 3

Fastening the Arch Top to the wall is just like fastening the vinyl shutters. With the exterior shutter in location against the wall, drill through the Arch Top and wall a total of 3 1/4" with a 1/4" drill bit. See figure 2 at right for proper Shutter-Lok (or shutterplug) drill location.

#### Step 4

Grasp the Shutter-Lok by supporting the shank and push it through the shutter hole into the wall surface. Tap the Shutter-Lok gently with a hammer to snug the vinyl shutter against the siding. Leave a little bit of play to allow for expansion and contraction of the vinyl shutter. Do not over tighten the Shutter-Loks or this will cause the vinyl shutter to dimple.

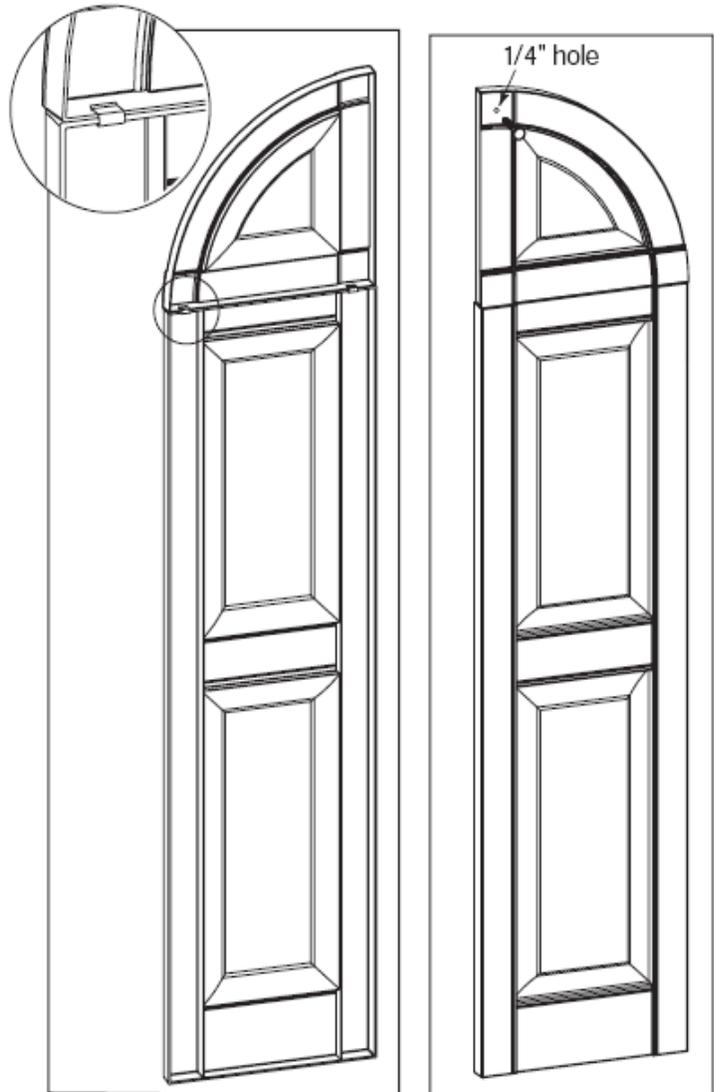


Fig. 1 (back of assembly)

Fig. 2 (front of assembly)